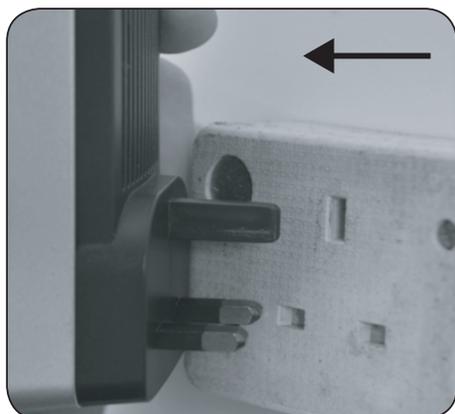

FACTORY RESET

This process will reset to factory default and clear any linked Bell Pushes/Transmitters to the Chime Unit. It should only be used when you wish to restart the link process for all devices.

Do not use at any other time or your settings will be lost.

Note: for easy reset, keep the Bell Push and Chime Unit close together. This saves time and effort.



1. With the chime unit plugged into a mains socket, either turn off the mains power at the switch, or remove the chime unit from the mains supply.



2. On the chime unit, press and hold the chime replay ► button.



3. Still holding the chime replay ► button, switch on the power at the socket, or plug the chime unit back into the mains socket.



4. Continue to hold the chime replay button for approx. 10 seconds, after which the strobe will flash or an audible beep will sound.

The memory is now clear and all previous devices are no longer linked to this chime unit.

To link new bell pushes/transmitters, see section on 'Link / Programming Devices'

FACTORY RESET

This process will reset to factory default and clear any linked Bell Pushes/Transmitters to the Chime Unit. It should only be used when you wish to restart the link process for all devices.

Do not use at any other time or your settings will be lost.

Note: for easy reset, keep the Bell Push and Chime Unit close together. This saves time and effort.



1. With the battery compartment open, remove one of the batteries.



2. On the chime unit, press and hold the chime replay  button inside the battery compartment.



3. Still holding the chime replay  button, place the battery back into the compartment.



4. Continue to hold the chime replay button for approx. 10 seconds, after which the strobe will flash or an audible beep will sound.

The memory is now clear and all previous devices are no longer linked to this chime unit.

To link new bell pushes/transmitters, see section on 'Link / Programming Devices'